

2. Ballast Tray Replacement



Prior to beginning ensure you have a clean and dry workspace. Lay out required tools from spares kit and have paper towels available. It is a good idea to have a container to keep fasteners in as they are removed. Read through the instructions fully prior to beginning and make sure you understand what they are asking you to do.


Tools Required	Time to complete	Level of Difficulty
<ul style="list-style-type: none"> • 4mm Hex Ball Wrench 	<ul style="list-style-type: none"> • 1 minute 	<ul style="list-style-type: none"> • Easy





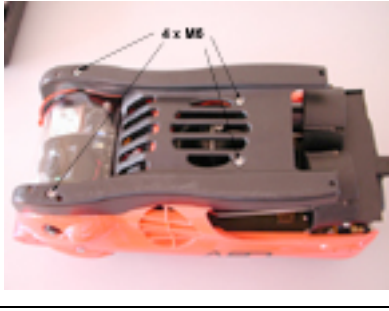
Prior to working on LBV make sure the power is off and the umbilical is DISCONNECTED.

Removal

NOTE	Prior to beginning remove protective bumper frame per 1. Bumper Frame Replacement.
	<p><u>Step 1</u></p> <p>Place vehicle upside down.</p>
	<p><u>Step 2</u></p> <p>Remove 4 M6x16 socket head cap head screws securing ballast tray.</p>

	<p><u>Step 3</u> Remove ballast tray and set aside.</p>
---	--

Installation

	<p><u>Step 1</u> Place vehicle upside down.</p>
	<p><u>Step 2</u> Lower ballast tray onto vehicle aligning the 4 holes.</p>
	<p><u>Step 3</u> Insert and tighten 4 M6x16 socket head cap head screws securing ballast tray.</p>
<p>NOTE</p>	<p>If fitted with optional bumper frame follow instructions in: 1. Protective Bumper Frame Replacement</p>